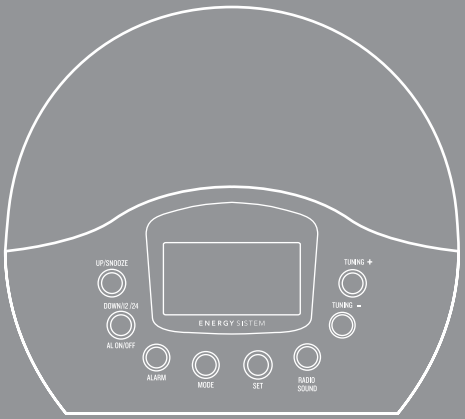
UP/SNOOZE
DOWN/12 /24
AL ON/OFF
ALARM
MODE
SET
RADIO
SOUND
TUNING +
TUNING -
ENERGY SISTEM

User manual

I. INTRODUCTION

Thank you for purchasing this **Energy™ Clock Radio 300 Time Ray**, we hope you will enjoy it.

Welcome to the Energy(tm) Clock Radio world.

The following sections provide an overview of your new device and its basics features. Please read everything carefully before start using the product.

2. IMPORTANT SAFETY INSTRUCTIONS.

To ensure your safety and the safety of others, please ensure that you read all the safety information before operating this product.
Keep this information in a safe place for future reference.

2.I. SAFETY CONSIDERATIONS.

- Do not disassemble the device. Any repair work must be performed by qualified Energy Sistem Soyntec's technical personnel.
- Do not use the Clock Radio in humid or damp conditions.
- Do not allow your Clock Radio to get wet.
- Keep the product away from direct sunlight and heat source such as radiators or stoves.
- Do not place naked flame sources, such as candles, on the top of
- the Clock Radio.
- Avoid any drop or hit on the Clock Radio.
- Switch off during thunderstorms.
- In case of long inactivity periods we recommend to Switch off the Clock Radio.

3. SERVICING.

There are no user serviceable parts in this Clock Radio.

4. BATTERY DISPOSAL

- Please ensure batteries are disposed of safely.
- Never dispose of batteries in a fire or with other household waste.
- Check with your local authority for disposal regulations.

5. PRODUCT CONTENT

- Clock radio **Energy™ Clock Radio 300**
- User manual.
- AC/DC adapter.

6. POWER SUPPLY

Your **Energy™ Clock Radio 300** is power on when the 6V AC/DC adapter (included) is connected to the wall power connection and plug to the clock radio.

Caution

- To take off the wall power connector you have to remove always from the adapter and never from the cable.

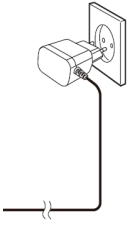

7. PRODUCT OVERVIEW

1. VOLUME AJUST
2. UP / SNOOZE
   - "UP" used to set the correct alarm and hour.
   - "SNOOZE" used for the snooze mode.
3. DOWN / 12 / 24
   - "DOWN" se used to set the correct alarm and hour.
   - "12 / 24" select the AM/PM or 24h format.
4. ALARM
   - Alarm function.
5. MODE
   - Mode selector.
6. SET
   - Settings.
7. RADIO / SOUND
   - Select the natural rounds, radio or the standard buzzer.
8. ILIGHT
   - Light adjust.
9. TUNER +
   - Turn tuner up.
10. TUNER -
    - Turn tuner down.

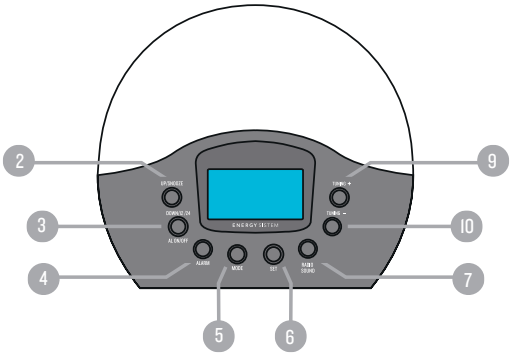
2
9
3
10
4
7
5
6
ENERGY SISTEM
ALARM
MODE
SET
SLEEP

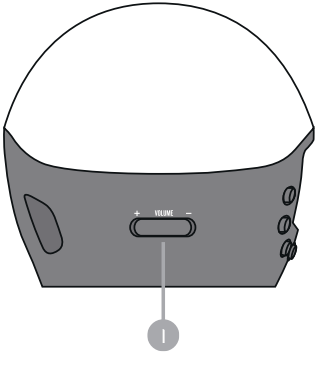
VOLUME
1

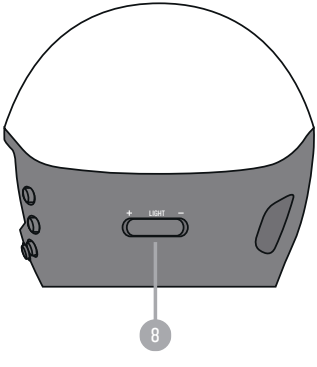
LIGHT
8

8. BATTERIES INSTALLATION

Remove the cover of the battery compartment and introduce the 9V battery.

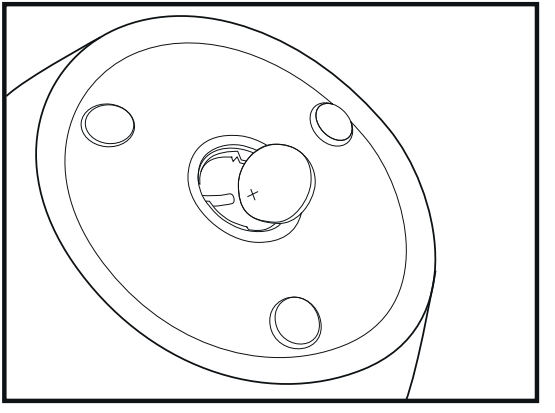

Don't let the batteries from the reach of children.

Don't try to activate the batteries by heat, recharge or any other way. Don't drop the batteries to the fire, disassemble or try to do a short circuit.

9. KEY FEATURES

- Gradual increasing of the light before the alarm sounds.
- Stimulates sleep with decreasing light up to darkness.
- Choose the sound that you prefer, either natural sound, your favourite radio station or with the buzzer.
- Listen your favourite radio station.
- Select any of the 4 different natural sounds.
- LED light technology, no heat and low consumption.
- 10 intensity light levels.
- LCD display with backlight for easy viewing.
- Perpetual calendar.
- Choose your favourite hour mode, 12 or 24h.
- Keeps your programming when there are power outages using a single battery.
- Snooze mode each 5 minutes.

10. FUNCTION INSTRUCTIONS

10.1. TIME AND DATE

When you power on the Clock Radio, it begins with:
YEAR: 2009 / DATE: 1 / MONTH: 1 / WEEK: Thursday. And the time on 12:00AM (00:00).
To adjust the time and date is necessary:

- Press the SET button; you can see the year place blinks, in that moment you can use the UP / SNOOZE y DOWN / 12 / 24 buttons to select the correct year.

- Press the SET button again; you can see the month place blinks, in that moment you can use the UP / SNOOZE y DOWN / 12 / 24 buttons to select the correct month.
- Press the SET button again; you can see the day place blinks, in that moment you can use the UP / SNOOZE y DOWN / 12 / 24 buttons to select the correct day.
- Press the SET button again; you can see the hour place blinks, in that moment you can use the UP / SNOOZE y DOWN / 12 / 24 buttons to select the correct hour.
- Press the SET button again; you can see the minutes place blinks, in that moment you can use the UP / SNOOZE y DOWN / 12 / 24 buttons to select the correct minute.
- Finally press the SET button to confirm and finish the setting.

10.2. ALARM

To set the alarm you need:

- Press the ALARM button, by standard the time is 12:00 AM, to set the alarm time you have to press the SET button and use the UP / SNOOZE y DOWN / 12 / 24 buttons to adjust to hour that you wish. Press the SET button again to adjust the minutes.
- When you finish the alarm setting, you can select the best way to waking up natural sounds, the classical buzzer or the selected radio station. Use the RADIO / SOUND button to do the selection.
- The alarm rings each 24h all the week. If you want to cancel the alarm you have to deactivate it.

10.3. "SUNRISE" MODE

The "SUNRISE" MODE is when the light of the Energy™ Clock Radio 300 start with a gradual intensity increase. It turns itself up before the alarm clock rings and gradually brightens up during the period time you set.
To activate the "SUNRISE" mode we have to press the MODE button and then the SET button. Using SNOOZE and DOWN / 12 / 24 you can set the timing that you want, having 00, 15, 30, 45, 60 and 90 minutes as option. When you choose the 00 option, means that the "SUNRISE" mode is off. In the display you can see that means that the "SUNRISE" mode is activate.

10.4. "SUNSET" MODE

The "SUNSET" mode is when the light and/or radio turn it self down until it is off.
To activate the "SUNSET" mode you have to press the MODE button two times and then the SET button to program it. Using the SNOOZE and DOWN / 12 / 24 buttons you can adjust the timing, using the options 00, 15, 30, 45, 60 and 90 minutes. When the option is 00, means that the "SUNSET" mode is not activate. In the display you can see that means that the "SUNSET" mode is activate.

10.5. SNOOZE MODE

When the alarm is turning on, if you press the SNOOZE the sound turns off automatically come on again after about 5 minutes.

It will be off after the ringing for 1 minute, and repeat in 1 minute later. It will repeat 5 times.
If we use the radio as alarm sound, the alarms keeps ringing until you press the RADIO / SOUND button and if you use the natural sound, the alarm will be off after 20 minutes.
To turn off the alarm you have to press the AL ON/OFF button.

10.6. LIGHT BRIGHTNESS ADJUST

To adjust the light brightness you have to use the LIGHT adjusts control. You count with 10 intensity levels.

11. TECHNICAL SPECIFICATIONS

Item	Especifications
Display	Backlight LCD
Tuner	Digital
Sound system	Mono
Volume control	Rotatory
Output power	650 mW
Input power	100 – 240V / 50 – 60Hz
Frecuency range	88.6MHz – 108.7MHz
Light type	2,40m
Maximum comsumption	1.5 W
Stand by comsumption	0.11 W

12. WARRANTY

Energy Sistem Soyntec S.A. warrants its products to be free from defects in materials and workmanship at the time of purchase.
The warranty period is 36 months from the date of purchase for your **Energy™ Clock Radio 300.**

WARRANTY PROCEDURE

1. Visit the Support section at http://support.energysistem.com and select your product to view the FAQ (Frequently Asked Questions). The solution to your problem is very likely to have been already published there. You will also be able to download user manuals, user guides, drivers and updates.
2. If you cannot find an appropriate solution in the Support section, you may send us your enquiry or warranty service request by email: support@energysistem.com.
3. Alternatively, you may prefer to contact the distributor from which you purchased the product, presenting the purchase receipt or invoice.

Specifications are subject to change without notice.

© 2011 by Energy Sistem®. All rights reserved.

Trademarks All company, brand and product names are trademarks or registered trademarks of their respective companies.

CE

13. DECLARATION OF CONFORMITY

Manufacturer Name: Energy Sistem Soyntec S. A.

Address: Pol. Ind. Finestrat. C/ Calpe, nº 1, 03509 Finestrat, Alicante

Tel: 902 388 388

Fax: 902 119 034

NIF: A53107488

We declare under our own exclusive responsibility that the product:

Energy Sistem® Clock Radio 300 Wake up light.
Is in compliance with the essential directives, norms and standards of the European Union 89/336/EEC (EMC Directive).

Manufacturing country: China

This symbol on the product or the instructions means that your electrical and electronic equipment should be disposed at the end of life separately from your household waste. For more information, please contact the local authority or dealer where you purchased the product.